Installer startet nicht!

Beitrag von "leon1912" vom 4. Dezember 2019, 22:20

2 8086	1903	1043	1D7D	Intel Corporation	Xeon E3-1200 v5/E3-1500 v5/6th Gen Core Processor Thermal Subsystem
2 8086	1904	1043	1D7D	Intel Corporation	Xeon E3-1200 v5/E3-1500 v5/6th Gen Core Processor Host Bridge/DRAM Registers
2 8086	9D2F	1043	201F	Intel Corporation	Sunrise Point-LP USB 3.0 xHCl Controller
2 8086	9D31	1043	1D7D	Intel Corporation	Sunrise Point-LP Thermal subsystem
2 8086	9D61	1043	1D7D	Intel Corporation	Sunrise Point-LP Serial IO I2C Controller #1
@ 8086	9D60	1043	1D7D	Intel Corporation	Sunrise Point-LP Serial IO I2C Controller #0
2 8086	9D23	1043	1D7D	Intel Corporation	Sunrise Point-LP SMBus
2 8086	9D03	1043	1D7D	Intel Corporation	Sunrise Point-LP SATA Controller [AHCI mode]
2 8086	9D21	1043	1D7D	Intel Corporation	Sunrise Point-LP PMC
@ 8086	9D15	0000	0000	Intel Corporation	Sunrise Point-LP PCI Express Root Port #6
@ 8086	9D14	0000	0000	Intel Corporation	Sunrise Point-LP PCI Express Root Port #5
2 8086	9D10	007F	0000	Intel Corporation	Sunrise Point-LP PCI Express Root Port #1
@ 8086	9D48	1043	1D7D	Intel Corporation	Sunrise Point-LP LPC Controller
@ 8086	9D70	1043	1D7D	Intel Corporation	Sunrise Point-LP HD Audio
@ 8086	9D3A	1043	1D7D	Intel Corporation	Sunrise Point-LP CSME HECI #1
2 8086	1916	1043	24AA	Intel Corporation	Skylake GT2 [HD Graphics 520]
10EC	8168	1043	200F	Realtek Semiconductor Co., Ltd.	RTL8111/8168/8411 PCI Express Gigabit Ethernet Controller
@ 168C	0036	1A3B	2182	Qualcomm Atheros	QCA9565 / AR9565 Wireless Network Adapter

Hier ist das Screenshot