

OpenCore - DeviceProperties - Fragen zu Einstellung

Beitrag von „MadmaxMac“ vom 13. August 2020, 14:12

Hallo Griven,

das steht so in den Anleitungen und ralf. hat dazu auch was verfasst

(siehe AMD Bereich).

Aber ich habe es trotzdem versucht, mit dem Ergebnis, dass es tatsächlich nicht funktioniert.

Aber mal anders herum gefragt: Wenn ich bei DeviceProperties den PCIRoot sowie built-in lösche, funktioniert dann VoodooHDA Vielleicht?

Ich habe mich dumm-und dämlich gegoogelt, aber keine Lösung gefunden.

Opfer dagegen habe ich genug gefunden:

Code

1. I have the exact same system with gpu. Are you using clover or opencore? I am using 10.15.0 with clover no issues. If I change to opencore, sound is not working (voodooohda) - both analog and hdmi I hear sound but it cuts every few seconds with crackling noise. Happens with system sounds too. No crash though. I am using the ssdt-ec-usb-x-amd. I also tried adding kernel patches with mask in clover but fails to boot. So, I am stuck with no updates. Please share efi.

In der config.plist von Clover habe ich nicht gefunden, was den Sound/ton betrifft, was ich in OpenCore verwenden kann.

Wenn alle Stricke reißen, muss ich wohl oder Übel zu einem USB SoundAdapter greifen.

Gruß MadmaxMac