

Gigabyte Z790 A Elite AX ICE Startet automatisch neu

Beitrag von „TakisGR“ vom 28. Juli 2025, 20:25

BIOS Settings

- **Secure Boot : Disabled**
- **Internal Graphics : Disabled**
- Above 4G Decoding : Enabled
- Above 4GB MMIO BIOS assignment : Enabled
- Re-Size BAR Support : Disabled
- **Intel Platform Trust Technology(PTT): Disabled**
- **Hyper-Threading : Enabled**
- **CFG Lock : Disabled**

- Fast Boot - Disabled
- CSM - Disabled
- VT-d, Thunderbolt - Disabled
- Serial port - Disabled
- Intel SGX - Disabled

- OS type: Other OS
- EHCI/XHCI Hand-off - Enabled
- Security Device Support - Disable
- Internal Graphics - Disabled